




MICROWAVE OVEN

M959 (WHITE) / M959C (RED)

M959GR (GREEN)

SERVICE Manual

MICROWAVE OVEN

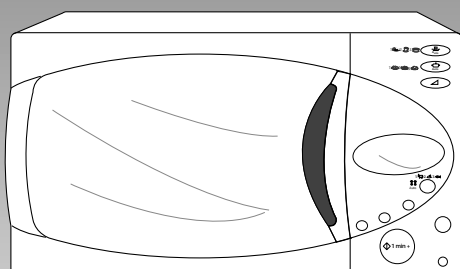

CONTENTS

1. Precaution
2. Specifications
3. Operating Instructions
4. Disassembly and Reassembly
5. Alignment and Adjustments
6. Troubleshooting
7. Exploded Views and Parts List
8. PCB Diagrams
9. Schematic Diagrams

1. Precaution

Follow these special safety precautions. Although the microwave oven is completely safe during ordinary use, repair work can be extremely hazardous due to possible exposure to microwave radiation, as well as potentially lethal high voltages and currents.



1-1 Safety precautions (⚠)

1. All repairs should be done in accordance with the procedures described in this manual. This product complies with Federal Performance Standard 21 CFR Subchapter J (DHHS).
2. Microwave emission check should be performed to prior to servicing if the oven is operative.
3. If the oven operates with the door open : Instruct the user not to operate the oven and contact the manufacturer and the center for devices and radiological health immediatly.
4. Notify the Central Service Center if the microwave leakage exceeds 5 mW / cm²
5. Check all grounds.
6. Do not power the MWO from a "2-prong" AC cord. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.
7. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including: nonmetallic control knobs and compartment covers.
8. Make sure that there are no cabinet openings through which people--particularly children--might insert objects and contact dangerous voltages. Examples: Lamp hole, ventilation slots.
9. Inform the manufacturer of any oven found to have emmission in excess of 5 mW / cm², Make repairs to bring the unit into compliance at no cost to owner and try to determine cause. Instruct owner not to use oven until it has been brought into compliance.
10. Service technicians should remove their watches while repairing an MWO.
11. To avoid any possible radiation hazard, replace parts in accordance with the wiring diagram. Also, use only the exact replacements for the following parts: Primary and secondary interlock switches, interlock monitor switch.
12. If the fuse is blown by the Interlock Monitor Switch: Replace all of the following at the same time: Primary and secondary switches, as well as the Interlock Monitor Switch. The correct adjustment of these switches is described elsewhere in this manual. Make sure that the fuse has the correct rating for the particular model being repaired.
13. Design Alteration Warning:
Use exact replacement parts only, i.e., only those that are specified in the drawings and parts lists of this manual. This is especially important for the Interlock switches, described above. Never alter or add to the mechanical or electrical design of the MWO. Any design changes or additions will void the manufacturer's warranty.
10. Always unplug the unit's AC power cord from the AC power source before attempting to remove or reinstall any component or assembly.
14. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
15. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs). Examples include integrated circuits and field-effect transistors.

Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground.
16. Always connect a test instrument's ground lead to the instrument chassis ground *before* connecting the positive lead; always remove the instrument's ground lead last.

CENTRAL SERVICE CENTER

1-2 Special Servicing Precautions (Continued)

17. When checking the continuity of the witches or transformer, always make sure that the power is OFF, and one of the lead wires is disconnected.
18. Components that are critical for safety are indicated in the circuit diagram by shading,  or .
19. Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

1-3 Special High Voltage Precautions

1. High Voltage Warning
Do not attempt to measure any of the high voltages--this includes the filament voltage of the magnetron. High voltage is present during any cook cycle.

Before touching any components or wiring, always unplug the oven and discharge the high voltage capacitor (See Figure 1-1)

2. The high-voltage capacitor remains charged about 30 seconds after disconnection. Short the negative terminal of the high-voltage capacitor to the oven chassis. (Use a screwdriver.)
3. High voltage is maintained within specified limits by close-tolerance, safety-related components and adjustments. If the high voltage exceeds the specified limits, check each of the special components.

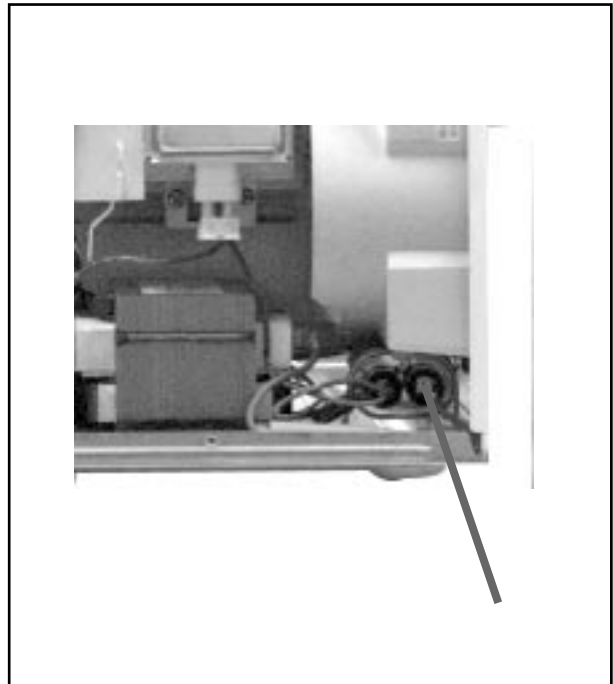


Fig. 1-1. Discharging the High Voltage Capacitor

2. Specifications

2-1 Table of Specifications


TIMER	99 MINUTES 90 SECONDS	POWER LEVEL		ON TIME	OFF TIME
POWER SOURCE	230V 50Hz, AC	%	M959		
POWER CONSUMPTION	MICROWAVE : 1,550W	10%	90W	4 sec	26 sec
OUTPUT POWER	FROM 100 TO 1000W (10 LEVEL POWER) (IEC-705 TEST PROCEDURE)	20%	180W	7 sec	23 sec
		30%	270W	10 sec	20 sec
		40%	360W	13 sec	17 sec
		50%	450W	16 sec	14 sec
OPERATING FREQUENCY	2,450MHz	60%	540W	19 sec	11 sec
		70%	630W	22 sec	8 sec
MAGNETRON	OM75PH(31)	80%	720W	25 sec	5 sec
COOLING METHOD	COOLING FAN MOTOR	90%	810W	28 sec	2 sec
OUTSIDE DIMENSIONS	517(W) x 297(H) x 395(D)	100%	900W	30 sec	0 sec

2-2 Comparison Chart


FEATURE	MODEL	M959/ M959C / M959GR
AUTO REHEAT		0
AUTO COOK		0
POWER LEVEL		0
TIME SETTING AND WEIGHT		0
AUTO DEFROST		0
DEODORIZATION		0

3. Operating Instructions

3-1 Control Panel

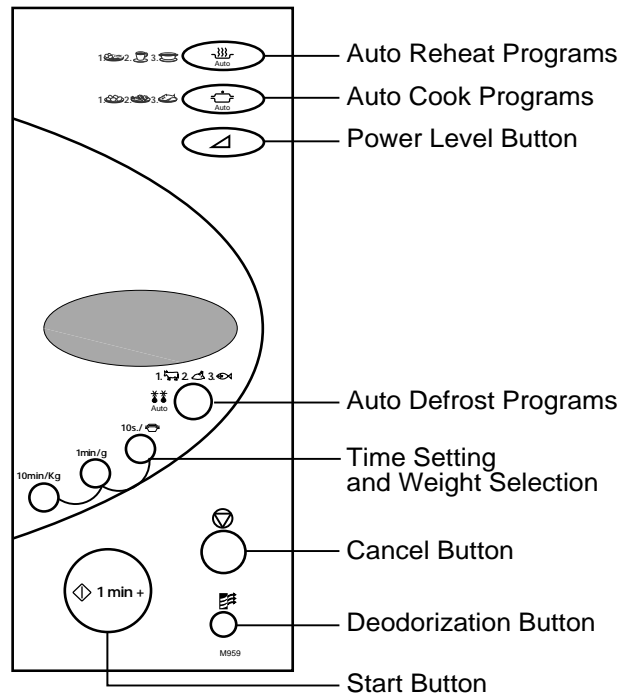

3-2 Features & External Views

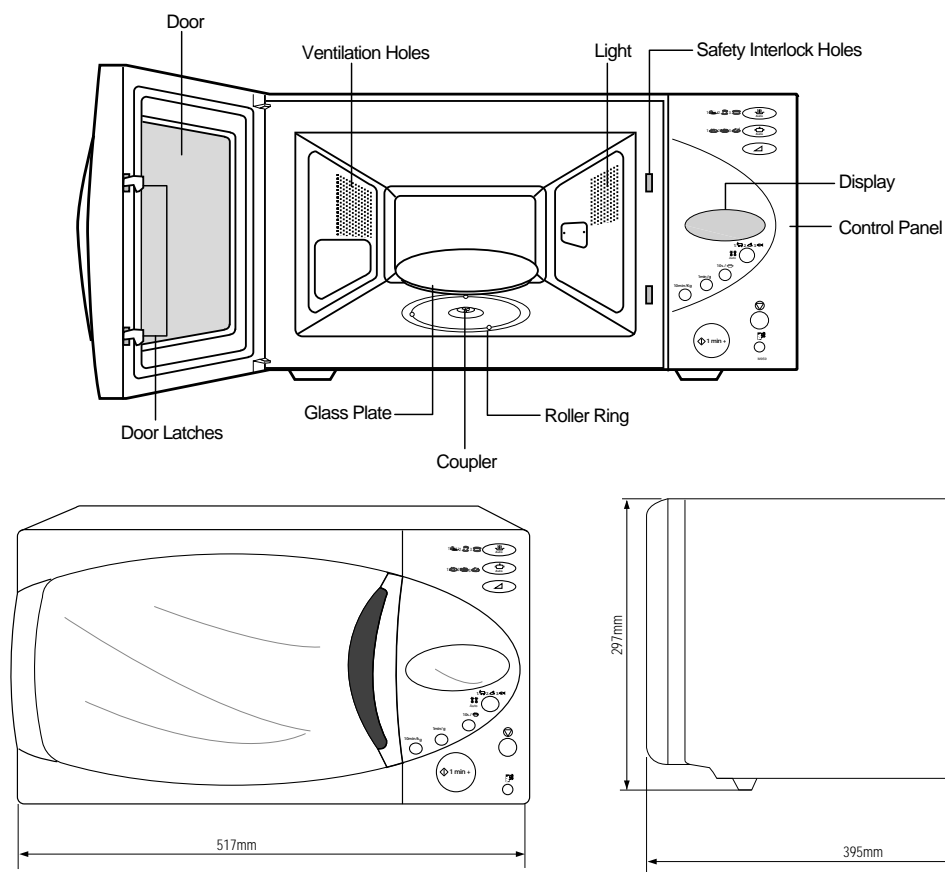

4. Disassembly and Reassembly


4-1 Replacement of Magnetron, Motor Assembly and Lamp

Remove the magnetron including the shield case, permanent magnet, choke coils and capacitors (all of which are contained in one assembly).

1. Disconnect all lead wires from the magnetron and lamp.
2. Remove a screw securing the magnetron supporter.
3. Remove the magnetron supporter.
4. Remove the air cover.
5. Remove screws securing the magnetron to the wave guide.
6. Take out the magnetron very carefully.
7. Remove screws from the back panel.
8. Take out the fan motor.
9. Remove the oven lamp by rotating to pull out from hole of air cover.

NOTE1: When removing the magnetron, make sure that its antenna does not hit any adjacent parts, or it may be damaged.

NOTE2: When replacing the magnetron, be sure to remount the magnetron gasket in the correct position and make sure the gasket is in good condition.

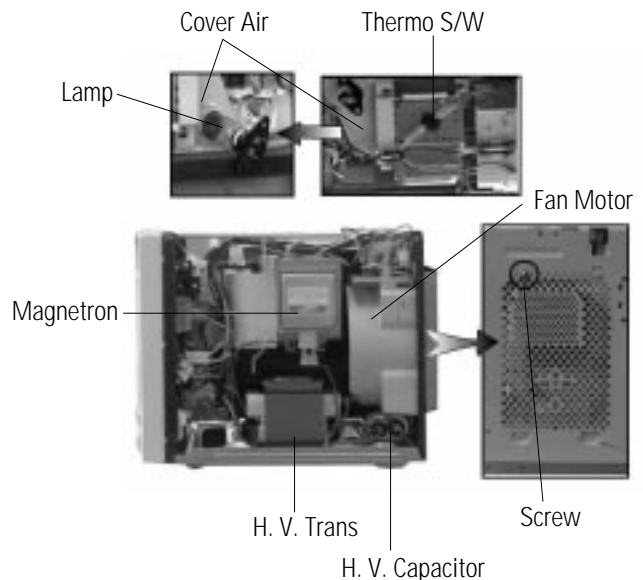

4-1 Replacement of High Voltage Transformer


1. Discharge the high voltage capacitor.
2. Disconnect all the leads.
3. Remove the mounting bolts.
4. Reconnect the leads correctly and firmly.

PRECAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

PRECAUTION


There exists HIGH VOLTAGE ELECTRICITY with high current capabilities in the circuits of the HIGH VOLTAGE TRANSFORMER secondary and filament terminals. It is extremely dangerous to work on or near these circuits with the oven energized. DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

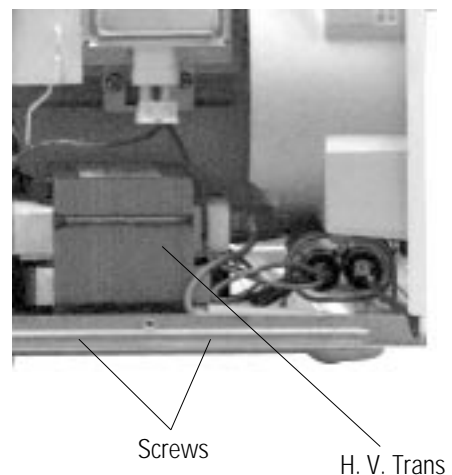

4-3 Replacement of Door Assembly

4-3-1 Removal of Door Assembly

Remove hex bolts securing the upper hinge and lower hinge. Then remove the door assembly.

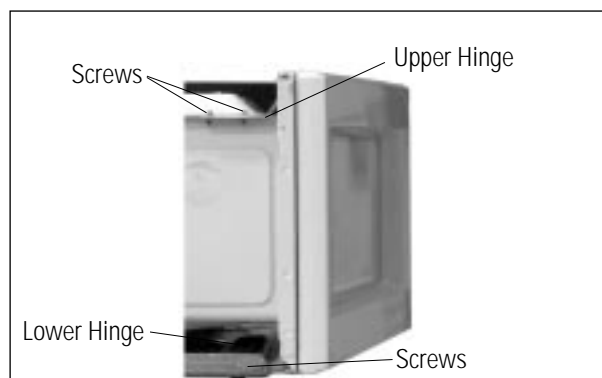

4-3-2 Removal of Door "C"


Insert flat screwdriver into the gap between Door "E" and Door "C" to remove Door "C". Be careful when handling Door "C" because it is fragile.



4-3-3 Removal of Door "E"


Following the procedure as shown in the figure, insert and bend a thin metal plate between Door "E" and Door "A" until you hear the 'tick' sound.

1. Insertion depth of the thin metal plate should be 0.5mm or less.

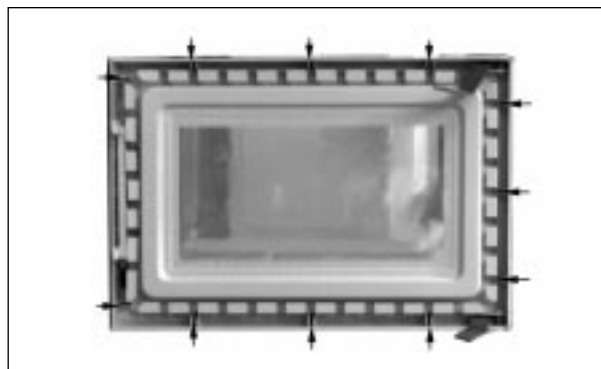

4-3-4 Removal of Key Door & Spring

Remove pin hinge from Door "E"
Detach spring from Door "E" and key door.

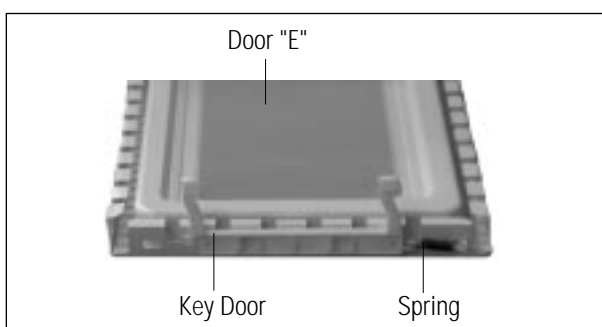

4-3-5 Reassembly Test

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.


1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave energy may leak from the space between the door and oven.
3. Do the microwave leakage test.

4-4 Replacement of Fuse

1. Disconnect the oven from the power source.
2. Remove the 10A fuse in the fuse holder.
3. When replacing the 10A fuse, be sure to use an exact replacement part. If new 10A fuse blows out again after replacement, check the primary interlock switch, door sensing switch and interlock monitor switch.
4. When the above three switches operate properly, check if any other part such as the control circuit board, blower motor or high voltage transformer is defective.

4-5 Replacement of Drive Motor


1. Take out the glass tray, guide roller and coupler from cavity.
2. Turn the oven upside down to replace the drive motor.
3. Remove a screw securing the drive motor cover.
4. Disconnect all the lead wires from the drive motor.
5. Remove screws securing the drive motor to the cavity.
6. Remove the drive motor.
7. When replacing the drive motor, be sure to remount it in the correct position.
8. Connect all the leads to the drive motor.
9. Screw the drive motor cover to the base plate with a screw driver.
10. Remount the coupler in the correct position.

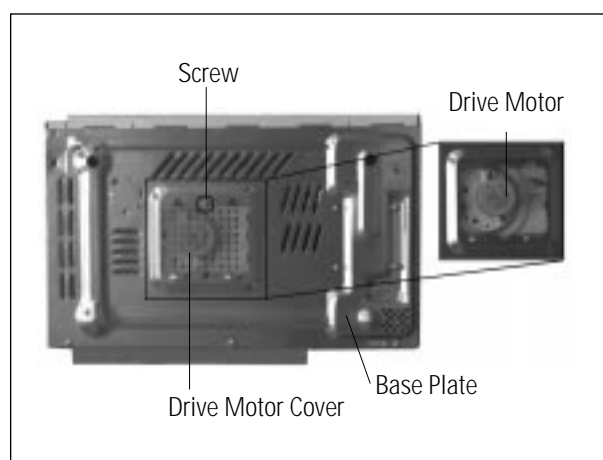

4-6 Replacement of Control Circuit Board


4-6-1 Removal of Ass'y Control Box

1. Be sure to ground any static electric charge in your body and never touch the touch control circuitry.
2. Disconnect the connectors from the control circuit board.
3. Remove screws securing the control box assembly.
4. Remove the screw securing the ground tail of the keyboard.

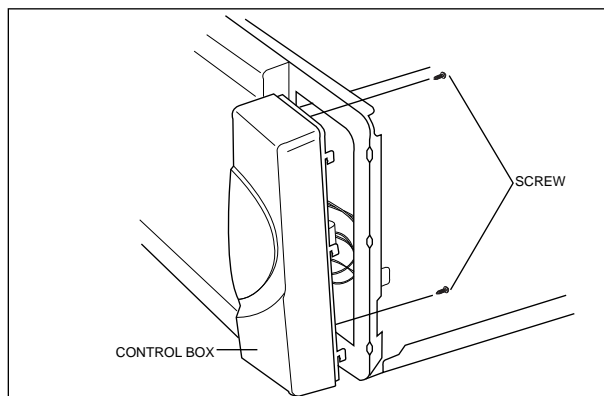

4-6-2 Removal of Ass'y P.C.B

1. Pull the lever end of the plastic fastener and remove the Flexible Printed Circuit(FPC) of membrane panel.
2. Remove screws securing the control circuit board.
3. Lift up the control circuit board from the Ass'y control box.
4. When reconnecting the FPC connector, make sure that the holes on the connector are properly engaged with the hooks on the Plastic Fastener.

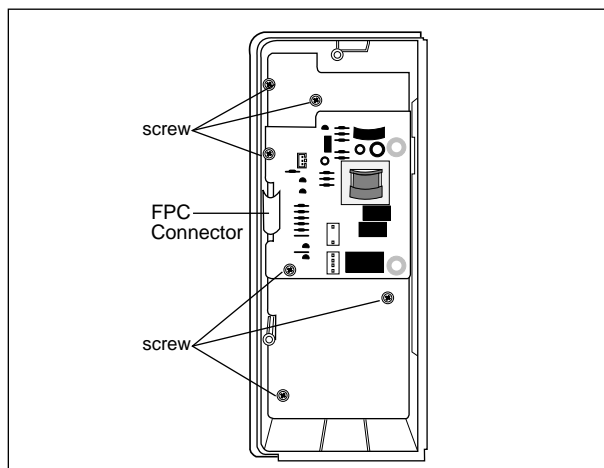

5. Alignment and Adjustments

PRECAUTION


1. High voltage is present at the high voltage terminals during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

5-1 High Voltage Transformer

1. Remove connectors from the transformer terminals and check continuity.
2. Normal resistance readings are as follows:

MODEL	M959/ M959C / M959GR
Secondary	Approx. 130Ω
Filament	Approx. 0Ω
Primary	Approx. 1.700Ω

(Room temperature = 20°C)

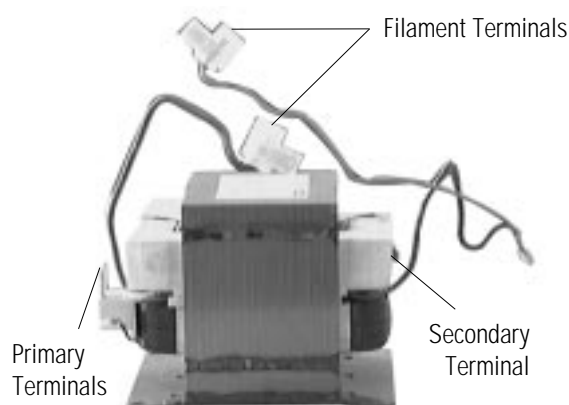


5-2 Low Voltage Transformer

1. The low voltage transformer is located on the control circuit board.
2. Remove the low voltage transformer from the PCB Ass'y and check continuity.
3. Normal resistor reading is shown in the table.

Terminals	Resistance
1-2(Input)	1,000Ω
3-4(Output 2.9V)	3.947Ω
5-6(Output 13V)	2.117Ω

5-3 Magnetron

1. Continuity checks can indicate only an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron :
2. Isolate the magnetron from the circuit by disconnecting its leads.
3. A continuity check across the magnetron filament terminals should indicate one ohm or less.
4. A continuity check between each filament terminal and magnetron case should read open.

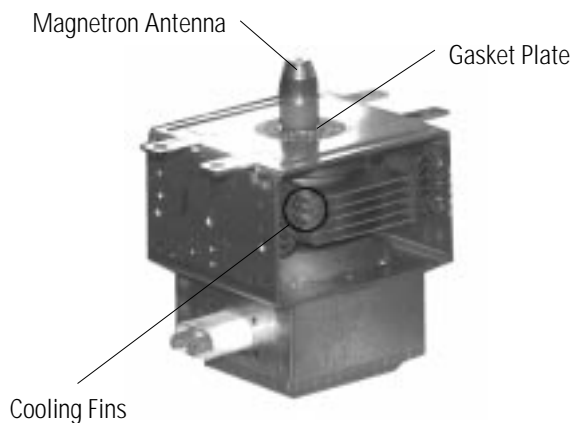

5-4 High Voltage Capacitor

1. Check continuity of the capacitor with the meter set at the highest resistance scale.
2. Once the capacitor is charged, a normal capacitor shows continuity for a short time, and then indicates $9M\Omega$.
3. A shorted capacitor will show continuous continuity.
4. An open capacitor will show constant $9M\Omega$.
5. Resistance between each terminal and chassis should read infinite.

5-5 High Voltage Diode

1. Isolate the diode from the circuit by disconnecting its leads.
2. With the ohm-meter set at the highest resistance scale, measure across the diode terminals. Reverse the meter leads and read the resistance. A meter with 6V, 9V or higher voltage batteries should be used to check the front-to back resistance of the diode (otherwise an infinite resistance may be read in both directions). The resistance of a normal diode will be infinite in one direction and several hundred $K\Omega$ in the other direction.

5-6 Main Relay and Power Control Relay


1. The relays are located on the PCB Ass'y. Isolate them from the main circuit by disconnecting the leads.
2. Operate the microwave oven with a water load in the oven. Set the power level set to high.
3. Check continuity between terminals of the relays after the start pad is pressed.

5-7 Adjustment of Primary Switch, Door Sensing Switch and Monitor Switch

Precaution

For continued protection against radiation hazard, replace parts in accordance with the wiring diagram and be sure to use the correct part number for the following switches: Primary and secondary interlock switches, and the interlock monitor switch (replace all together). Then follow the adjustment procedures below. After repair and adjustment, be sure to check the continuity of all interlock switches and the interlock monitor switch.

1. When mounting Primary switch and Interlock Monitor switch to Latch Body, consult the figure.
2. No specific adjustment during installation of Primary switch and Monitor switch to the latch body is necessary.
3. When mounting the Latch Body to the oven assembly, adjust the Latch Body by moving it so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the Latch Body to the oven assembly.
4. Reconnect to Monitor switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.
5. Confirm that the gap between the switch housing and the switch actuator is no more than 0.5mm when door is closed.

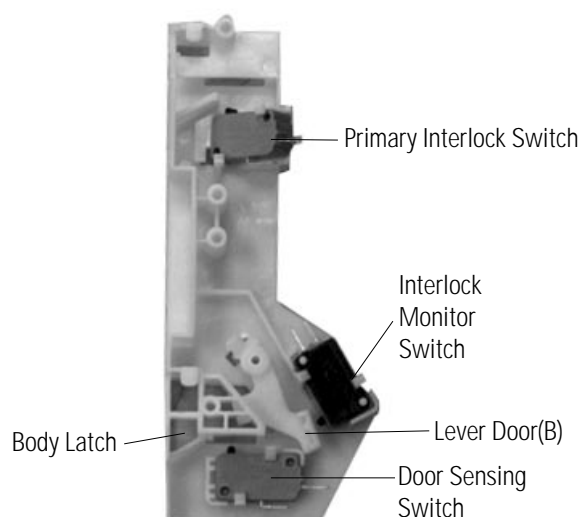

	Door Open	Door Closed
Primary switch	∞	0
Monitor switch (COM-NC)	0	∞
Monitor switch (COM-NO)	∞	0
Door Sensing S/W	∞	0

5-8 Output Power of Magnetron

CAUTION MICROWAVE RADIATION

PERSONNEL SHOULD NOT ALLOW EXPOSURE TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test.

Equipment needed :

* Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)

* One glass thermometer with mercury column

NOTE: Check line voltage under load. Low voltage will lower the magnetron output. Make all temperature and time tests with accurate equipment.

1. Fill the one liter glass vessel with water.
2. Stir water in glass vessel with thermometer, and record glass vessel's temperature ("T1", $10 \pm 1^\circ\text{C}$).
3. After moving the water into another glass vessel, place it in the center of the cooking tray. Set the oven to high power and operate for 54 seconds exactly. (2 seconds included as a holding time of magnetron oscillation:)
4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T2").
5. Subtract T1 from T2. This will give you the water temperature rise. (ΔT)
6. The output power is obtained by the following formula;

$$\text{Output Power} = \frac{4.187 \times 1000 \times \Delta T}{42}$$

42 : Heating Time (sec)
 4.187 : Coefficient for Water
 1000 : Water (cc)
 ΔT : Temperature Rise ($T_2 - T_1$)

$$* \text{Output (W)} = 100 \times \Delta T$$

7. Normal temperature rise for this model is 9°C to 11°C at 'HIGH'.

NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise.

Additional power test should be made if temperature rise is marginal.

NOTE 2: Output power in watts is computed by multiplying the temperature rise (step E) by a factor of 91 times the of centigrade temperature.


5-9 Microwave Heat Distribution - Heat Evenness

The microwave heat distribution can be checked indirectly by measuring the water temperature rise at certain positions in the oven:

1. Prepare five beakers made of 'Pyrex', having 100 milliliters capacity each.
2. Measure exactly 100 milliliters off water load with a measuring cylinder, and pour into each beaker.
3. Measure the temperature of each water load. (Readings shall be taken to the first place of decimals.)
4. Put each beaker in place on the cooking tray as illustrated in figure below. Start heating.
5. After heating for 2 minutes, measure the water temperature in each beaker.
6. Microwave heat distribution rate can be calculated as follows:


$$\text{Heat Distribution} = \frac{\text{Minimum Temperature Rise}}{\text{Maximum Temperature Rise}} \times 100(\%)$$

The result should exceed 65%.

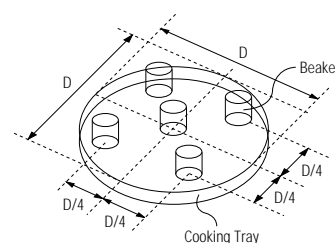

5-10 Procedure for Measurement of Microwave Energy Leakage


- 1) Pour 275 ± 15 cc of $20 \pm 5^\circ\text{C}$ ($68 \pm 9^\circ\text{F}$) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
- 2) Start to operate the oven and measure the leakage by using a microwave energy survey meter.
- 3) Set survey meter with dual ranges to 2,450MHz.
- 4) When measuring the leakage, always use the 2 inch spacer cone with the probe. Hold the probe perpendicular to the cabinet door. Place the spacer cone of the probe on the door and/or cabinet door seam and move along the seam, the door viewing window and the exhaust openings moving the probe in a clockwise direction at a rate of 1 inch/sec. If the leakage testing of the cabinet door seam is taken near a corner of the door, keep the probe perpendicular to the areas making sure that the probe end at the base of the cone does not get closer than 2 inches to any metal. If it gets closer than 2 inches, erroneous readings may result.
- 5) Measured leakage must be less than $4\text{mW}/\text{cm}^2$, after repair or adjustment.

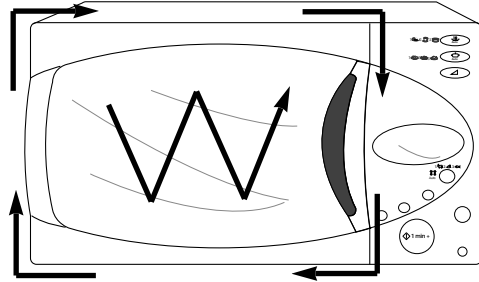

Maximum allowable leakage is $5\text{mW}/\text{cm}^2$.
 $4\text{mW}/\text{cm}^2$ is used to allow for measurement and meter accuracy

5-11 Check for Microwave Leakage

1. Remove the outer panel.
2. Pour 275 ± 15 cc of $20 \pm 5^\circ\text{C}$ ($68 \pm 9^\circ\text{F}$) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
3. Start the oven at the highest power level.
4. Set survey meter dual ranges to 2,450MHz.
5. Using the survey meter and spacer cone as described above, measure around the opening of magnetron, the surface of the air guide and the surface of the wave guide as shown in the following photo. (but avoid the high voltage components.) The reading should be less than $4\text{mW}/\text{cm}^2$.

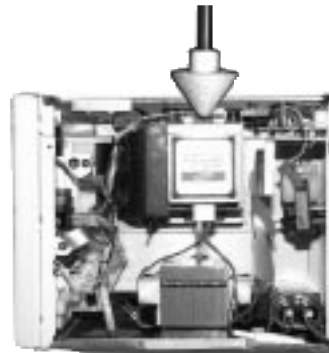

5-12 Note on Measurement

- 1) Do not exceed the limited scale.
- 2) The test probe must be held on the grip of the handle, otherwise a false reading may result when the operator's hand is between the handle and the probe.
- 3) When high leakage is suspected, do not move the probe horizontally along the oven surface; this may cause damage to the probe.
- 4) Follow the recommendation of the manufacturer of the microwave energy survey meter.

5-13 Leakage Measuring Procedure

- 5-13-1 Record keeping and notification after measurement
- 1) After adjustment and repair of a radiation preventing device, make a repair record for the measured values, and keep the data.
 - 2) If the radiation leakage is more than $4\text{mW}/\text{cm}^2$ after determining that all parts are in good condition, functioning properly and the identical parts are replaced as listed in this manual notify that fact to ;

CENTRAL SERVICE CENTER

- 5-13-2 At least once a year have the microwave energy survey meter checked for accuracy by its manufacturer.

6. Troubleshooting

PRECAUTION

1. CHECK GROUNDING BEFORE CHECKING FOR TROUBLE.
2. BE CAREFUL OF THE HIGH VOLTAGE CIRCUIT.
3. DISCHARGE THE HIGH VOLTAGE CAPACITOR.
4. WHEN CHECKING THE CONTINUITY OF THE SWITCHES OR TRANSFORMER, DISCONNECT ONE LEAD WIRE FROM THESE PARTS AND THEN CHECK CONTINUITY WITHOUT THE POWER SOURCE ON. TO DO OTHERWISE MAY RESULT IN A FALSE READING OR DAMAGE TO YOUR METER.
5. DO NOT TOUCH ANY PART OF THE CIRCUIT OR THE CONTROL CIRCUIT BOARD, SINCE STATIC DISCHARGE MAY DAMAGE IT. ALWAYS TOUCH GROUND WHILE WORKING ON IT TO DISCHARGE ANY STATIC CHARGE BUILT UP.

6-1 Electrical Maltunction


SYMPTOM	CAUSE	CORRECTIONS
Oven is dead. Fuse is OK. No display and no operation at all.	<ol style="list-style-type: none"> 1. Open or loose lead wire harness 2. Open thermal cutout (Magnetron) 3. Open low voltage transformer 4. Defective Ass'y PCB 	<p>Check fan motor when thermal cutout is defective.</p> <p>Check Ass'y PCB when LVT is defective.</p>
No display and no operation at all. Fuse is blown.	<ol style="list-style-type: none"> 1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective monitor switch (NOTE1) 4. Shorted HVCapacitor 5. Shorted HVTransformer (NOTE2) <p>NOTE 1: All of these switches must be replaced at the same time. (refer to adjustment instructions) Check continuity of power relay contacts and if it has continuity, replace power relay also.</p> <p>NOTE 2: When HVTransformer is replaced, check diode and magnetron also.</p>	<p>Check adjustment of primary, interlock monitor, door sensing switch.</p>
Oven does not accept key input (Program)	<ol style="list-style-type: none"> 1. Key input is not in-Sequence 2. Open or loose connection of membrane key pad to Ass'y PCB 3. Shorted or open membrane panel 4. Defective Ass'y PCB 	<p>Refer to operation procedure.</p> <p>Replace PCB main.</p>
Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on.)	<ol style="list-style-type: none"> 1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit <p>NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to lower output and/or intermittent oscillation.</p> <ol style="list-style-type: none"> 3. Defective high voltage components H.V.Transformer H.V.Capacitor H.V.Diode, H.V.Fuse Magnetron 4. Open or loose wiring of power relay 5. Defective primary latch switch 6. Defective power relay or Ass'y PCB 	<p>Adjust door and latch switches.</p> <p>Check high voltage component according to component test procedure and replace if it is defective.</p> <p>Replace PCB main.</p>

6-1 Electrical Maltunction(continved)







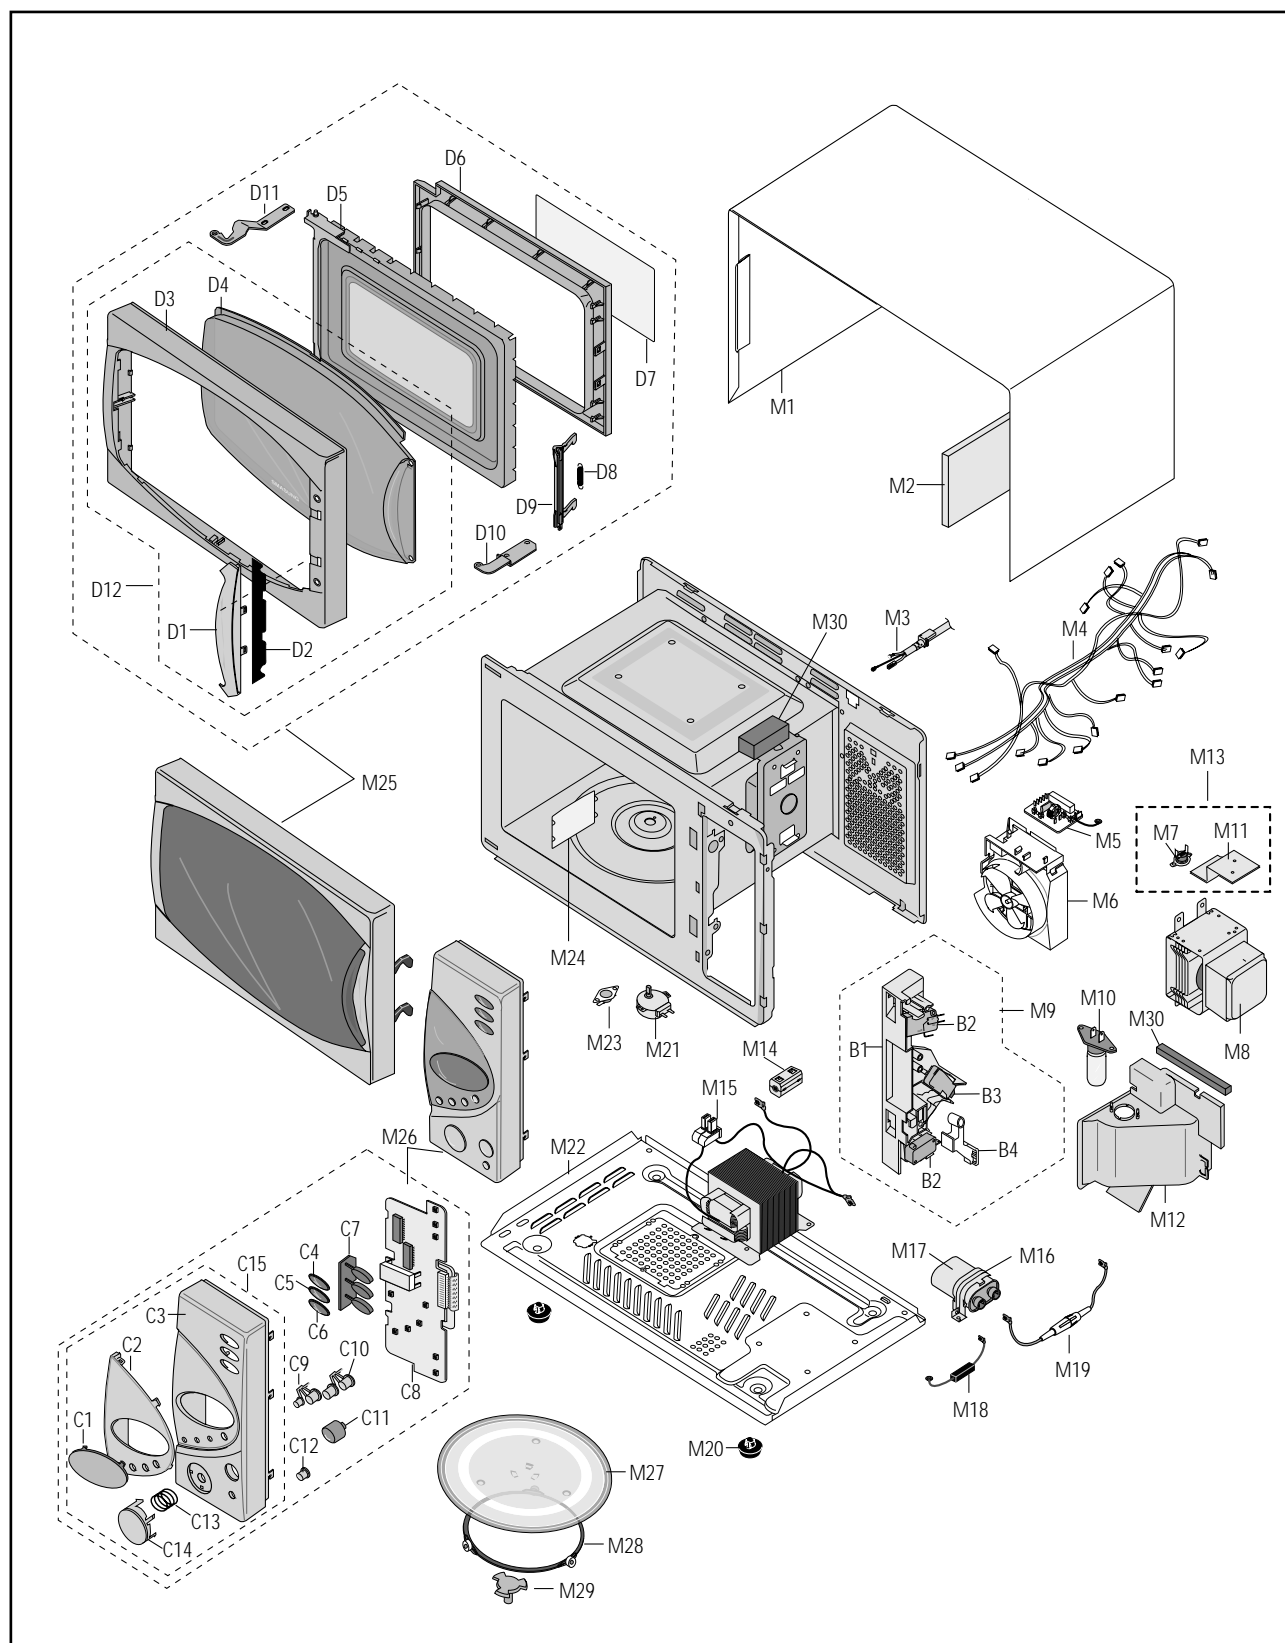

SYMPTOM	CAUSE	CORRECTIONS
Oven lamp and fan motor turn on	1. Misadjustment or loose wiring of primary latch switch 2. Defective primary latch switch	Adjust door and latch switches.
Oven can program but timer does not start.	1. Open or loose wiring of secondary interlock switch 2. Off-alignment of primary interlock 3. Defective secondary interlock S/W	Adjust door and interlock switches.
Microwave output is low;. Oven takes longer time to cook food.	1. Decrease in power source voltage. 2. Open or loose wiring of magnetron filament circuit. (Intermittent oscillation)) 3. Aging of magnetron	Consult electrician.
Fan motor turns on when plugged in	Loose wiring of door sensing switch	Check wire of door sensing switch.
Oven does not operate and return to the plugged in mode.	Defective Ass'y PCB	Replace PCB main.
Loud buzzing noise can be heard.	1. Loose fan and fan motor 2. Loose screws on H.V.Transformer 3. Shorted H.V.Diode	Tighten screws of fan motor. Tighten screws of H.V.Transformer. Replace H.V.Diode.
Turntable motor does not rotate.	1. Open or loose wiring of turntable motor. 2. Defective turntable motor.	Replace turntable motor.
Oven stops operation during cooking	1. Open or loose wiring of primary interlock switch 2. Operation of thermal cutout(Magnetron)	Adjust door and latch switches.
Sparks	1. Metallic ware or cooking dishes touching on the oven wall. 2. Ceramic ware trimmed with gold or silver powder also causes sparks.	Inform the customer. Do not use any type of cookware with metallic trimming.
Uneven cooking	Uneven intensity of microwave due to its characteristics.	Wrap thinner parts of the food with aluminum foil. Use plastic wrap or cover with a lid. Stir once or twice while cooking foods such as soup, cocoa, or milk.
Noise from the turntable motor when it starts to operate.	Noise may result from the motor.	Replace turntable motor.

7. Exploded Views and Parts List


7-1 Exploded Views



7-2 Main Parts List

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
M 1	DE70-30001A	PANEL-OUTER;SECC T0.6 360 1128 EPOXY-COATIN	1	WHITE
M 1	DE70-30001E	PANEL-OUTER;SECC T0.6 360 1128 W/RED RE-44	1	RED
M 1	DE70-30001I	PANEL-OUTER;SECC T0.6 360 1128 DEEP/GRN MX	1	GREEN
M 2	DE63-90035G	CUSHION-RUBBER;DFA20 T2 W190 L100 BLK	1	
M 3	DE39-20054C	ASSY POWER CORD;KKP-4819D/B206 250V10A L150	1	
M 4	DE39-40537A	WIRE HARNESS-A;230V50HZ M945(SAW)	1	
M 5	DE91-40093A	ASSY NOISE FILTER;SN-E10D 250V 10A	1	
M 6	DE31-10156A	MOTOR-FAN;SMF-945EA 230/50 2400 M97G45	1	
M 7	DE47-20009A	THERMOSTAT;CS-7SA (160/60) 187Y 250V7.5A 160	1	
M 8	DE03-30035A	MAGNETRON;OM75PH(31)ESS	1	
M 9	DE93-20020A	ASSY BODY LATCH;RE-43B/90B	1	
M 10	4713-001004	LAMP-INCANDESCENT;230V,-,40W,ORG,-,-,25x	1	
M 11	DE61-50490A	BRACKET-TCO;SECC1 T0.6 34 58	1	
M 12	DE71-60016A	COVER-AIR;PP 2 WHT M945/MB45	1	
M 13	DE91-70101C	ASSY-THERMOSTAT;MW5574W 160/60 187-HORIZ	1	
M 14	DE73-90027A	FERRITE CORE;NI-ZN T13.8 W21.0 L28.0 BNF 14	1	
M 15	DE26-10100A	TRANS-H.V;SHV-945EG1 230V 50HZ 2310V DPC	1	
M 16	DE61-50106A	BRACKET-HVC;SECC T0.8 W31 L125.8	1	
M 17	2501-001019	C-OIL;1.01uF,2100V,BK,35x54x90,20mm	1	
M 18	DE59-40001A	DIODE-H.V;HVR-1X-32B-12	1	
M 19	DE91-70061A	ASSY-H.V.FUSE;THV060T-0800-H 5KV/0.8A WHT	1	
M 20	DE61-40017A	FOOT;PP(A353) BLK MW5630T	2	
M 21	DE31-10154A	MOTOR-DRIVE;M2HJ49ZR02,ST-16 1V 5/6	1	
M 22	DE80-10001A	BASE-PLATE;SGCC T0.8 345 565	1	
M 23	DE47-20008A	THERMOSTAT;PW2N-52JC 100/60 250V/7.5A H	1	
M 24	DE71-60382A	COVER-CEILING;MICASHEET T0.5 70 133	1	
M 25		ASSY DOOR;M959/AMF WHT BASIC	1	WHITE ● 
M 25		ASSY DOOR;M959C/AMF RED	1	RED ● 
M 25		ASSY DOOR;M959GR/XEF GREEN	1	GREEN ● 
M 26		ASSY CONTROL-BOX;230V50HZ M959 WHT	1	WHITE ● 
M 26		ASSY CONTROL-BOX;230V50HZ M959CAMF RED	1	RED ● 
M 26		ASSY CONTROL-BOX;230V50HZ M959GR/XEF GRN	1	GREEN ● 
M 27	DE74-20015B	TRAY-COOKING;GLASS T6.0 PI318 1050G MW5630T	1	
M 28	DE92-90189D	ASSY-GUIDE ROLLER;D19 STD	1	
M 29	DE67-60075A	COUPLER;PPS 7G BRN M97G45	1	
M 30	DE63-90065N	CUSHION-GUIDE;PUT-FOAM T10 W10 L200 BLK MW55	1	
M 31	DE63-90065O	CUSHION-GUIDE;PUT-FOAM T35 W20 L135 VBLK MW55	1	

● : Option Parts

 : Warning :Electrostatically Sensitive Devices

7-3 Door Parts List

Ref. No.	Parts No.	Description / Specification	Q'ty	Remarks
D 1	DE64-20112D	HANDLE-DOOR;ABS(HR0370U) 30G WHT M959	1	WHITE
D 1	DE64-20112C	HANDLE-DOOR;ABS BLK 30G RE-447	1	RED
D 1	DE64-20112E	HANDLE-DOOR;ABS(HR0370D) 30G GRN M959GR	1	GREEN
D 2	DE01-00098A	FILM-DOOR;PET T0.13 W22.6 L201.8	1	WHITE ONLY
D 3	DE64-40263F	DOOR-A;ABS(HR-0370U) 160G WHT M959	1	WHITE
D 3	DE64-40263G	DOOR-A;ABS(HR-0370U) 160G GRN M959GR NE	1	RED
D 3	DE64-40263H	DOOR-A;ABS(HR-0370D) 160G GRN M959GR NE	1	GREEN
D 4	DE67-20265D	DOOR-SCREEN;ACRYL (IF850)ED17 M959	1	
D 5	DE92-50127H	ASSY DOOR-E;COATING BLACK T0.8	1	WHITE/RED
D 5	DE92-50127F	ASSY DOOR-E;BLK COATING DOOR-E/T0.8	1	GREEN
D 6	DE64-40012A	DOOR-C;RESIN-PP(TB53) T2.0 CE945GF BLA	1	
D 7	DE01-00002B	FILM-DOOR;PC T0.15 275 175 MW5574W	1	
D 8	DE61-70126A	SPRING-KEY;0.8 0.36 6 BLUING	1	WHITE/RED
D 8	DE61-70032A	SPRING-KEY;ES MSWR P10.6 D5.4 L25 MW8640T	1	GREEN
D 9	DE64-40264A	DOOR-KEY;POM(HANDLE) T.25 W51 L40 40G	1	
D 10	DE61-80003A	HINGE-LOWER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
D 11	DE61-80002A	HINGE-UPPER;SCP1 T2.3 26 77 ZPC3 WHT CHR	1	
D 12	DE92-40197A	ASSY DOOR-A;M959 WHT	1	WHITE
D 12	DE92-40198A	ASSY DOOR-A;M959C RED	1	RED
D 12	DE92-40198B	ASSY DOOR-A;M959GR.XEF GRN	1	GREEN

7-4 Standard Parts List

Parts No.	Description / Specification	Q'ty	Remarks
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	P-C-EA
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	S-M-EA
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	N-F-EA
DE60-10033A	SCREW-TH;TH,+,M4,L10,MSWR10,FEFZY	2	HI-LOW
DE60-10033A	SCREW-TH;TH,+,M4,L10,MSWR10,FEFZY	2	HI-UPP
DE60-10045A	SCREW-TAP PH;PH,M3,L6,FEFZY	2	MG-TCO
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	TNS-HV
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	TNS-HV
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	5	PN/OUT
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	B-PLTE
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	BD-LAT
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	CN-BOX
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	CV/AIR
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	MO/FAN
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	1	CV-TCO
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	2	M/GEAR
DE60-10045A	SCREW-TAP PH;PH,M3,L6,FEFZY	1	
DE60-10066A	SCREW-TAP TH;TH,M4,L8,FEFZY,2-SLOT	2	H/DOOR
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	B/D-MO
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	1	B/HVC

7-5 Control Parts List


Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE71-60366F	COVER-PANEL;ABS(HR0370U) 45G WHT M95	1	WHITE
C 1	DE71-60366G	COVER-PANEL;ABS-HR0370 45G BLK M959C	1	RED
C 1	DE71-60366K	COVER-PANEL;ABS(HR0370D) GRN M959GR/XEF	1	GREEN
C 2	DE67-40145A	WINDOW-DISPLAY;ACRYL T2 W40 L77 SMOG 30G	1	
C 3	DE72-70171G	CONTROL-PANEL;ABS(HR0370U) WHT 160G M9	1	WHITE
C 3	DE72-70171H	CONTROL-PANEL;ABS-HR0370 RED 160G M959	1	RED
C 3	DE72-70171Q	CONTROL-PANEL;ABS GRN M959/XEF	1	GREEN
C 4	DE66-20174R	BUTTON-SELECT-A;PC 2G WHT M959	1	WHITE
C 4	DE66-20174S	BUTTON-SELECT-A;PC 2G WINE-RED M759C	1	RED
C 4	DE66-20174T	BUTTON-SELECT-A;PC 2G DEEP-GRN M759GR	1	GREEN
C 5	DE66-20197J	BUTTON-SELECT(A-B);PC 2G WHT M959	1	WHITE
C 5	DE66-20197K	BUTTON-SELECT(A-B);PC 2G WINE-RED M759C	1	RED
C 5	DE66-20197L	BUTTON-SELECT(A-B);PC 2G DEEP-GRN M759GR	1	GREEN
C 6	DE66-20198J	BUTTON-SELECT(A-C);PC 2G WHT M959	1	WHITE
C 6	DE66-20198K	BUTTON-SELECT(A-C);PC 2G WINE-RED M759C	1	RED
C 6	DE66-20198L	BUTTON-SELECT(A-C);PC 2G DEEP-GRN M759GR	1	GREEN
C 7	DE66-20179A	BUTTON-SELECT;ABS(HR0370) NTR 30G RE-445	1	
C 8	DE91-10502A	ASSY PCB-MAIN;RC-M959-00 230V50HZ LED M959	1	
C 9	DE66-20175E	BUTTON-SELECT-B;ABS(HR0370U) 5G, WHT M959	1	WHITE
C 9	DE66-20175D	BUTTON-SELECT-B;ABS(HR0370) BLK 5G RE-446	1	RED
C 9	DE66-20175F	BUTTON-SELECT-B;ABS(HR0370D) 5G GRN M959GR	1	GREEN
C 10	DE66-20176E	BUTTON-SELECT-C;ABS(HR0370U) 5G, WHT M959	1	WHITE
C 10	DE66-20176D	BUTTON-SELECT-C;ABS(HR0370) BLK 5G RE-446	1	RED
C 10	DE66-20176F	BUTTON-SELECT-C;ABS(HR0370) 5G GRN M959GR	1	GREEN
C 11	DE66-20177E	BUTTON-SELECT-D;ABS(HR0370U) 3G, WHT M959	1	WHITE
C 11	DE66-20177B	BUTTON-SELECT-D;ABS(HR0370) RED 3G RE-445R	1	RED
C 11	DE66-20177F	BUTTON-SELECT-D;ABS(HR0370D) 2G GRN M959GR/XEU	1	GREEN
C 12	DE66-20178E	BUTTON-SELECT-E;ABS(HR0370U) WHT 2G M959	1	WHITE
C 12	DE66-20178B	BUTTON-SELECT-E;ABS(HR0370) RED 3G RE-445R	1	RED
C 12	DE66-20178F	BUTTON-SELECT-E;ABS(HR0370D) 2G GRN M959GR	1	GREEN
C 13	DE61-70126A	SPRING-KEY;0.8 36 6 BLUING	1	
C 14	DE66-20173E	BUTTON-START;ABS(HR0370U) 7G WHT M959	1	WHITE
C 14	DE66-20173F	BUTTON-START;ABS(HR0370) 7G RED M959C	1	RED
C 14	DE66-20173M	BUTTON-START;ABS GRN M959GR/XEF	1	GREEN
C 15	DE93-30406G	ASSY CONTROL-PANEL;M959 WHT	1	WHITE
C 15	DE93-30406H	ASSY CONTROL-PANEL;240V50HZ M959C RED	1	RED
C 15	DE93-30406Q	ASSY CONTROL-PANEL;230V50HZ M959GR/XEF GRN	1	GREEN

7-6 Body Latch Parts List

Ref. No	Parts No.	Description / Specification	Q'ty	Remarks
B 1	DE66-40021A	LATCH-BODY;POM(F20-02) 50GR RE-330	1	
B 2	3405-000178	SWITCH-MICRO;250V,15A,200gf,SPST-NO	2	
B 3	3405-000175	SWITCH-MICRO;250V,15A,200gf,SPST-NO	1	
B 4	DE66-90054A	LEVER-SWITCH;POM(F20-02) 15G NTR RE-330	1	

8. P.C.B Diagrams

8-1 P.C.B Diagrams

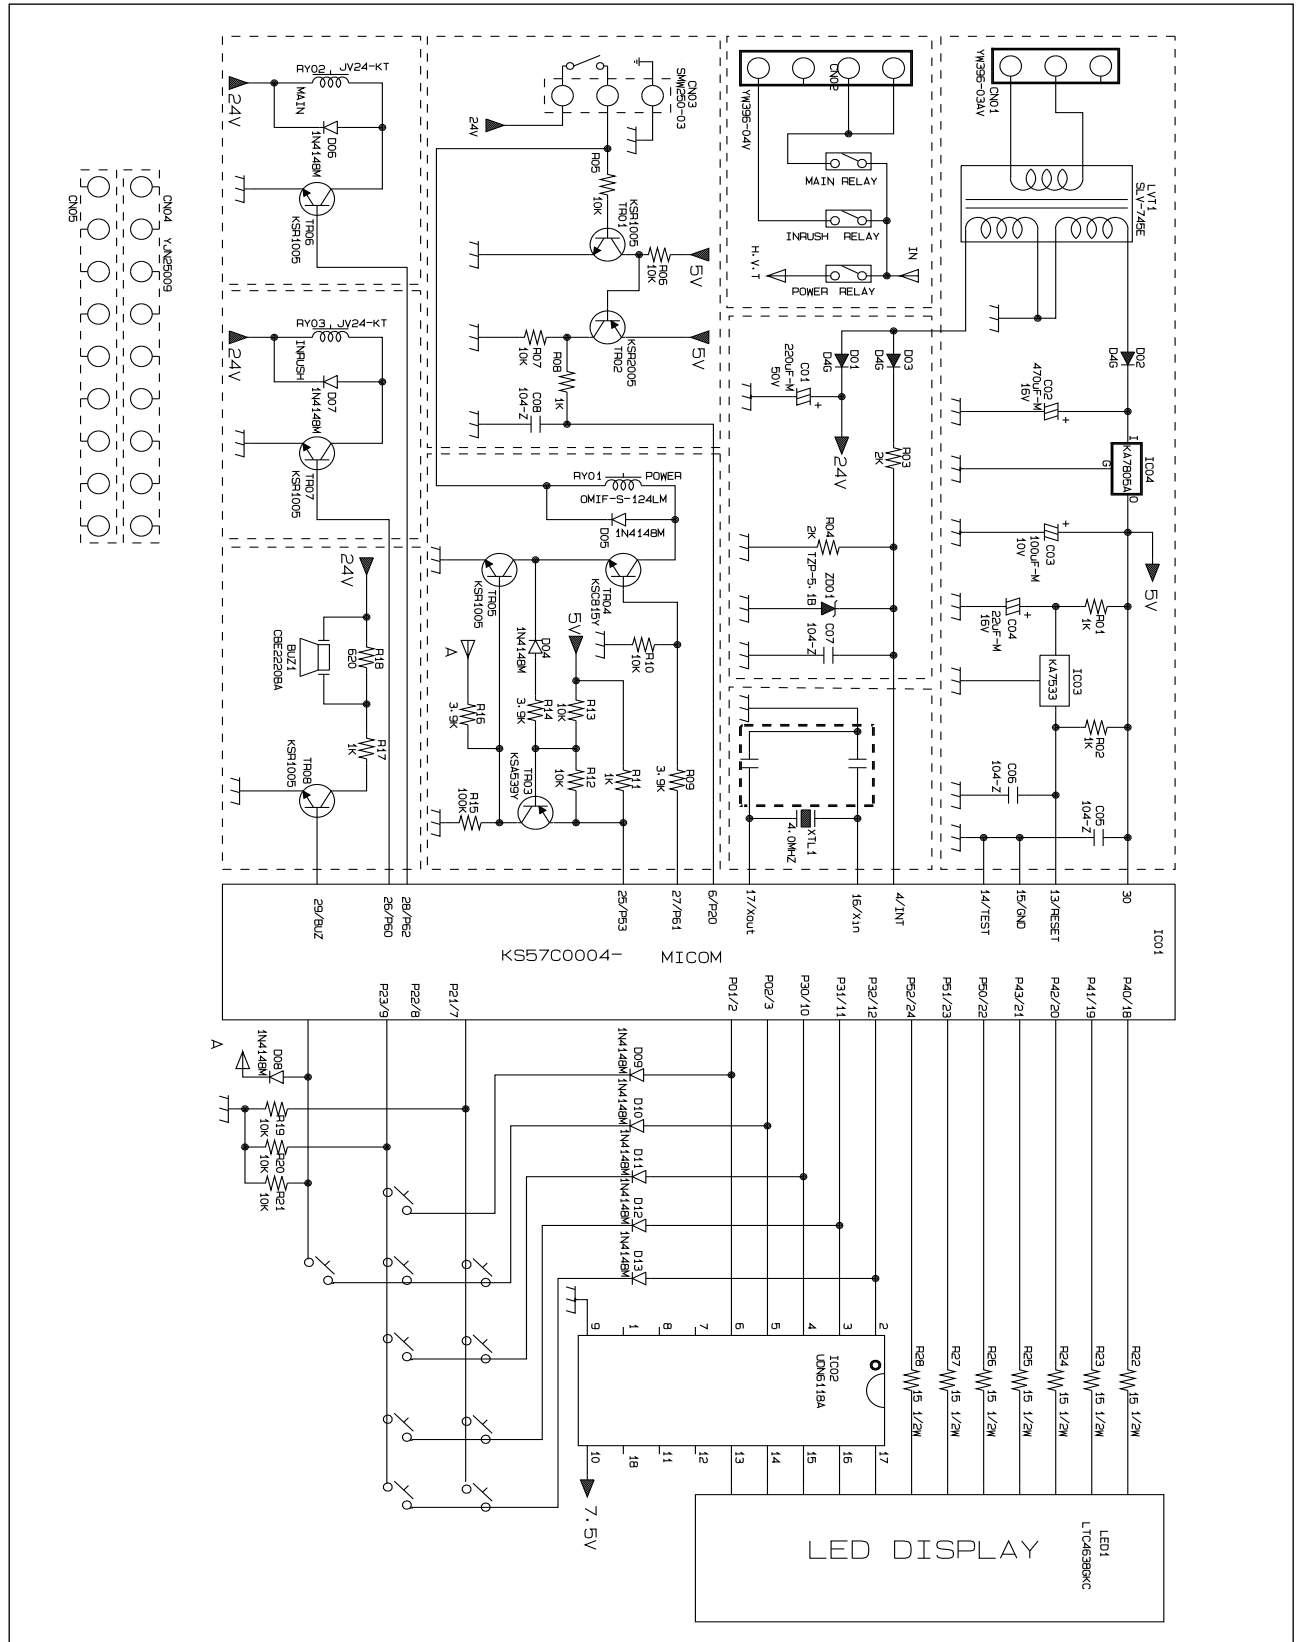

8-2 P.C.B Parts List

Parts No.	Description / Specification	Q'ty	Remarks
1003-001033	IC-SOURCE DRIVER;TD62781AP,DIP,18P,300MIL,OCTAL	1	IC02
3501-001050	RELAY-MINIATURE;24VDC,200mW,5A,1FormA,10mS,5mS	2	RY02,RY03
3501-001062	RELAY-POWER;24VDC,523.2mW,16A,1FormA,15mS	1	RY01
3710-000246	CONNECTOR-SOCKET;9P,1R,2.5mm,STRAIGHT,SN	1	CN05
DE07-20133A	LED DISPLAY;ODG-404ADL,GRN,5,22,H24,RE-445	1	LED1
DE09-30650A	IC-MCU;KS57C0004-G6E,4,DIP,4,-,M959	1	IC01
DE13-20016A	IC-VOLT REGU;KA7805A,TO-220AB,1A,0/125C	1	IC04
DE26-20146A	TRANS-L.V;SLV-745EN,230V,50HZ,AC17/7V	1	LVT1
DE30-20016A	BUZZER;CBE2220BA,STICK	1	BUZ1
DE37-90019A	CONNECTOR ASSY;YJN25009,PLATE,73MM,WHT	1	CN04
0401-001025	DIODE-SWITCHING;1N4148M,50V,450mA,DO-34,TP	10	D04~D13
0402-001188	DIODE-RECTIFIER;1T4(TP26),400V,1A,TS-1,TP	3	D1~03
0403-000717	DIODE-ZENER;MTZJ5.1B,5.1V,4.94-5.2V,500mW	1	ZD01
0501-000283	TR-SMALL SIGNAL;KSA539,PNP,400mW,TO-92,TP,120	1	TR03
0501-000388	TR-SMALL SIGNAL;KSC815,NPN,400mW,TO-92,BK,120	2	TR01,TR04
0504-001014	TR-DIGITAL;KSR1005,NPN,300mW,4.7K-10K,TO	4	TR02,TR05,TR06,TR08
2001-000273	R-CARBON;100Kohm,5%,1/8W,AA,TP,1.8x3.2mm	1	R15
2001-000290	R-CARBON;10Kohm,5%,1/8W,AA,TP,1.8x3.2mm	9	R05~R07,R10,R12,R13,R19~R21
2001-000429	R-CARBON;1Kohm,5%,1/8W,AA,TP,1.8x3.2mm	5	R01,R02,R08,R11,R17
2001-000502	R-CARBON;20ohm,5%,1/4W,AA,TP,2.4x6.4mm	7	R22~R28
2001-000577	R-CARBON;2Kohm,5%,1/8W,AA,TP,1.8x3.2mm	2	R03,04
2001-000613	R-CARBON;3.9Kohm,5%,1/8W,AA,TP,1.8x3.2mm	3	R09,R14,R16
2001-000904	R-CARBON;620ohm,5%,1/8W,AA,TP,1.8x3.2mm	1	R18
2202-000780	C-CERAMIC,MLC-AXIAL";100nF,+80-20%,50V,Y5V,TP,3.5x1	4	C05~C08
2401-000247	C-AL;100uF,20%,10V,GP,-,6.3x11mm,5mm	1	C03
2401-000876	C-AL;220uF,20%,50V,GP,TP,13x20mm,5mm	1	C01
2401-000914	C-AL;22uF,20%,16V,-,TP,5x11,5mm	1	C04
2401-001362	C-AL;470uF,20%,16V,GP,-,10x12.5mm,5mm	1	C02
2802-000161	RESONATOR-CERAMIC;4MHz,0.5%,TP,10.0x5.0x7.5mm	1	XTL1
3404-000282	SWITCH-TACT;12Vdc,50mA,120+-30gf,6.2x3.6mm	10	SW01~SW10
3711-000203	CONNECTOR-HEADER;1WALL,3P,1R,3.96mm,ANGLE,SN	1	CN01
3711-000240	CONNECTOR-HEADER;1WALL,4P,1R,3.96mm,STRAIGHT,SN	1	CN02
3711-000881	CONNECTOR-HEADER;BOX,3P,1R,2.5mm,STRAIGHT,SN	1	CN03
DE13-20009A	IC;KA7533,DIP	1	IC03 
DE39-60001A	WIRE-SO COPPER;PI0.6,SN,T,52MM,TAPING_WIRE	10	J01~J10
DE60-60012A	PIN-EYELET;ID2.1,OD2.5,L3.0,SN,BSP,TO.25	6	

9. Schematic Diagrams

9-1 Schematic Diagrams

